

USING THE BUTTONS



For each menu option, press **ENTER** to access the option on the screen, or press **UP** or **RIGHT** to scroll through the options until the one you want is on the screen, then press **ENTER**.

SETTING UP THE METER

Follow these instructions to quickly set up the advanced explosion-proof version of the B3000 Digital Flow Monitor. Press and release **MENU** to enter the programming mode.

1. Select the Fluid: At the *Fluid* prompt, press **ENTER**, select the fluid type and press **ENTER**.
2. Select the Meter Size: At the *Meter* prompt, press **ENTER**, select the correct meter size and press **ENTER**.
3. Select the Meter's K-Factor Unit: At the *KFacUnt* prompt, press **ENTER**, select *Pul/Gal* and press **ENTER**.
4. Enter the Meter's K-Factor Value: At the *KFactor* prompt, press **ENTER**. The most significant digit in the K-factor flashes. If the current K-factor is correct, press **ENTER** to advance to the next parameter. To change the K-factor, press **UP** to increment the digit until it matches the meter's first K-factor digit. Press **RIGHT** to advance to the next digit. Repeat this process until all K-factor digits have been entered, then press **ENTER**.
5. Select the Rate Time Interval: At the *RateInt* prompt, press **ENTER**, select a rate time interval and press **ENTER**.
6. Select the Rate Unit Interval: At the *RateUnt* prompt, press **ENTER**, select a rate unit interval and press **ENTER**.
7. Select the Totalizer Unit: At the *TotalUnt* prompt, press **ENTER**, select a totalizer unit and press **ENTER**.
8. The *TotalMult* screen displays next. Just *ignore* it and press **MENU** to save your changes and return to the Main Menu.

The initial setup is now complete.



Blancett registered trademark of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2019 Badger Meter, Inc. All rights reserved.

www.badgermeter.com

The Americas | Badger Meter | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400
 México | Badger Meter de las Americas, S.A. de C.V. | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882
 Europe, Eastern Europe Branch Office (for Poland, Latvia, Lithuania, Estonia, Ukraine, Belarus) | Badger Meter Europe | ul. Korfantego 6 | 44-193 Knurów | Poland | +48-32-236-8787
 Europe, Middle East and Africa | Badger Meter Europa GmbH | Nurtinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0
 Europe, Middle East Branch Office | Badger Meter Europe | PO Box 341442 | Dubai Silicon Oasis, Head Quarter Building, Wing C, Office #C209 | Dubai / UAE | +971-4-371 2503
 Slovakia | Badger Meter Slovakia s.r.o. | Racianska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01
 Asia Pacific | Badger Meter | 80 Marine Parade Rd | 19-07 Parkway Parade | Singapore 449269 | +65-63464836
 Switzerland | Badger Meter Swiss AG | Mittelholzerstrasse 8 | 3006 Bern | Switzerland | +41-31-932 01 11

DSY-QG-02906-EN-02 (June 2019)

IMPORTANT

The highlighted items below are the standard selections for barrels per day.

