

USING THE BUTTONS



For each menu option, press **ENTER** to access the option on the screen. Press **UP** or **RIGHT** to scroll through the options until the one you want is on the screen, then press **ENTER**.

SETTING UP THE METER


Follow these instructions to quickly set up the basic explosion-proof version of the B3000 Digital Flow Monitor. Press and release **MENU** to enter the programming mode.

1. Select the Fluid: At the *Fluid* prompt, press **ENTER**, select the fluid type and press **ENTER**.
2. Select the Meter Size: At the *Meter* prompt, press **ENTER**, select the meter size and press **ENTER**.
3. Select the Meter's K-Factor Unit: At the *KFacUnt* prompt, press **ENTER**, select *Pul/Gal* and press **ENTER**.
4. Enter the Meter's K-Factor Value: At the *KFactor* prompt, press **ENTER**. The most significant digit in the K-factor flashes. If the current K-factor is correct, press **ENTER** to advance to the next parameter. To change the K-factor, press **UP** to increment the digit until it matches the meter's first K-factor digit. Press **RIGHT** to advance to the next digit. Repeat this process until all K-factor digits have been entered, then press **ENTER**.
5. Select the Flow Unit/Interval: At the *FlowUnit* prompt, press **ENTER**, select *OB/D* and press **ENTER**.
6. Disable the Pulse Output: At the *PulsOut* prompt, press **ENTER**, select *Disable* and press **ENTER**.
7. Just **Ignore** the remaining screens and press **MENU** to save your changes and return to the Main Menu.

The initial setup is now complete.

IMPORTANT

The highlighted items below are the standard selections for barrels per day.

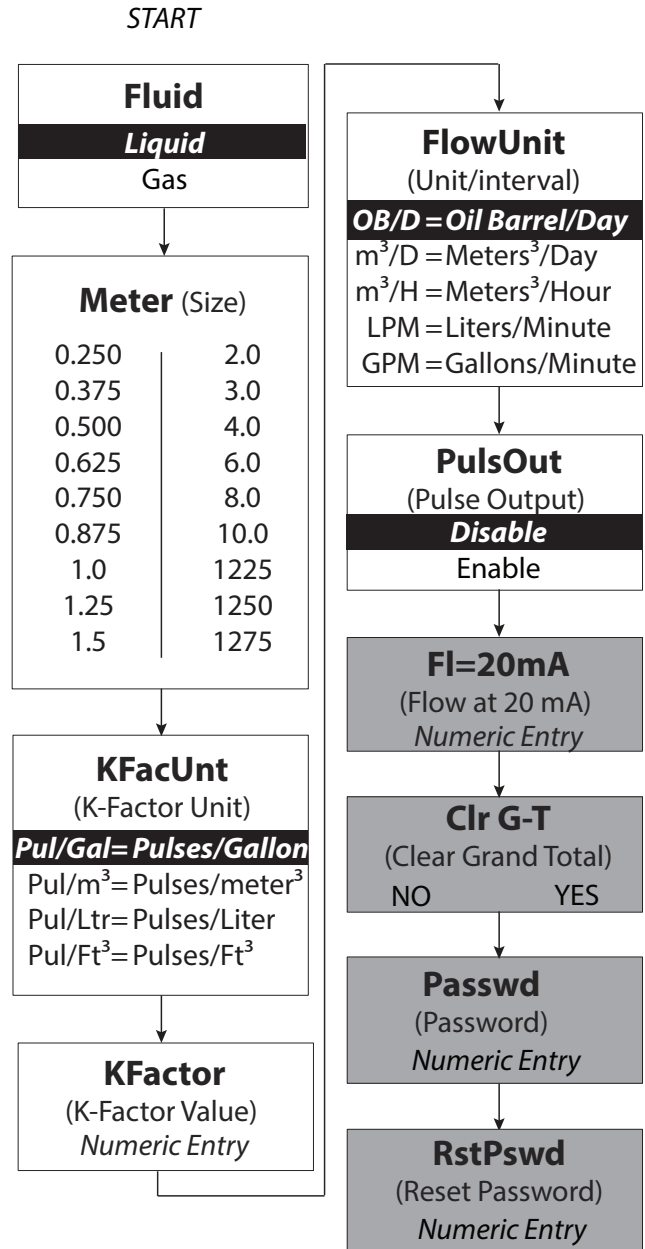

END