

DESCRIPTION

The Type 759 actuator with integral, top-mounted positioner is a pneumatically operated, spring opposed diaphragm actuator designed specifically to fit the Research Control Valve body-bonnet assembly. The unit is available in two sizes: one for the 1/4 in. (6 mm) valve and another larger version for the 1/2...1 in. (12...25 mm) valves. The unit, when equipped with the model TLDA positioner, functions as an air-to-close actuator extending the stem and closing the valve on an increasing instrument signal. The unit is designed to retract the stem, opening the valve, on a decreasing or loss of instrument signal. A force-balance system is incorporated using the full force of the supply air to position the stem precisely and with a high degree of repeatability. This type actuator should be used when the application calls for high positioning accuracy or when greater force is required over the standard actuator such as in the case of high shutoff pressures or excess packing friction.

FUNCTION

The Type 759 actuator normally operates in response to a 3...15 psi (0.2...1.0 bar) change in instrument signal, or a 12 psi (0.8 bar) range. The span, or range, of instrument signal is determined by the feedback range spring mounted directly under the positioner. The feedback range spring is responsible for sensing the position of the main diaphragm as the instrument signal changes. The position is then transmitted through the spring, directly to the positioner diaphragm assembly. The valve spring, housed inside the casting just above the yoke area, provides the upward thrust necessary to open the valve on a decreasing signal. Although few applications require additional spring forces over the standard spring and loading, additional supply pressure can occasionally be required to offset high forces or excess packing friction within the valve.


OPERATION

The actual operation of the unit is simple. Two air lines are required: one to provide the instrument signal and one to provide supply air. The amount of supply air required is determined by the amount of thrust necessary to overcome forces generated within the valve. The standard minimum supply pressure is 22 psig (1 bar) of clean, filtered, dry air.



The two air lines should be connected to the ports marked *Supply* and *Inst* on the positioner. The unmarked port between the supply and instrument port is provided with a blind pipe plug. Since this port is an integral part of the piping of air from the positioner to the main diaphragm, it can also be plugged with a gauge, which will indicate the actual output of the positioner to the main diaphragm. Upon an increase in instrument signal, the position of the pilot within the positioner is shifted up, causing the supply air to be directed through the positioner to the top of the main valve diaphragm cavity. As the main diaphragm travels downward, the compression on the feedback range spring decreases. The decreased force of the range spring is transmitted to the diaphragm assembly in the positioner. The downward shift in the positioner diaphragm assembly causes the pilot to re-position and assume a balanced state. The entire function creates a complete feedback loop within the unit, causing the valve to position accurately and with a high degree of repeatability.

NOTE: The positioner, when in operation, will constantly bleed unused supply air.

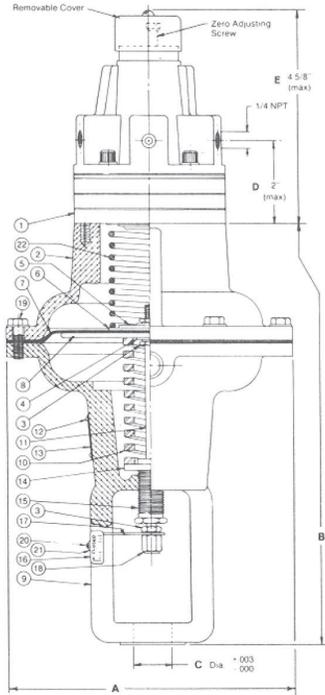

DESCRIPTION OF ITEMS

| Item | Description | Material | Material Size | |
|------|---------------------|----------------------|----------------------|-----------------------|
| | | | 1/4 in. (6.4 mm) | 1/2 in. (12.7 mm) |
| 1 | Positioner | Aluminum | — | — |
| 2 | Positioner case | Aluminum | — | — |
| 3 | Stem nut | 300 stainless steel | 1/4 in. (6.4 mm) hx | 3/8 in. (9.5 mm) hx |
| 4 | Washer | Steel-Zn/Pi | — | — |
| 5 | Spring loc. plate | Aluminum | — | — |
| 6 | Spring loc. plate | Aluminum | — | — |
| 7 | Diaphragm | Buna or Nylon | — | — |
| 8 | Diaphragm plate | Steel-Zn/Pi | — | — |
| 9 | Spring case & yoke | Aluminum | — | — |
| 10 | Spring | Steel | — | — |
| 11 | Stem | 316 stainless steel | 1/8 in. (3.2 mm) dia | 3/16 in. (4.8 mm) dia |
| 12 | Drive screw (2 ea.) | 300 stainless steel | — | — |
| 13 | Nameplate | Stainless steel* | — | — |
| 14 | Spring seat | Aluminum | — | — |
| 15 | Spring adjuster | 300 stainless steel | — | — |
| 16 | Travel scale | Stainless steel* | — | — |
| 17 | Travel pointer | Stainless steel | — | — |
| 18 | Stem connector | Stainless steel | — | — |
| 19 | Rim screws (6 ea.) | 300 stainless steel* | 5/16 in. (7.9 mm) hx | 3/8 in. (9.5 mm) hx |
| 20 | Screw | Stainless steel* | — | — |
| 21 | Washer | Stainless steel | — | — |
| 22 | Range spring | Steel | — | — |

DIMENSIONS

| Dimensions | Actuator Size | |
|------------|---------------------|---------------------|
| | 1/4 in. (6.4 mm) | 1/2 in. (12.7 mm) |
| A | 5.12 in. (103.0 mm) | 6.43 in. (163.3 mm) |
| B | 7.93 in. (201.4 mm) | 9.40 in. (238.8 mm) |
| C | 0.625 in. (15.9 mm) | 0.875 in. (22.2 mm) |
| D | 2 in. (50.8 mm) | 2 in. (50.8 mm) |
| E | 4.63 in. (117.6 mm) | 4.63 in. (117.6 mm) |
| Stroke | 0.437 in. (11.1 mm) | 0.562 in. (14.3 mm) |


SPECIFICATIONS

| | | |
|---------------------------------|-------------------|---|
| Weight w/ Positioner | 1/4 in. (6.4 mm) | Approx. 6 lbs (2.7 kg) |
| | 1/2 in. (12.7 mm) | Approx. 7 lbs (3.2 kg) |
| Pressure Rating | Max. operating | 60 psig (4.1 bar) |
| | Max. overload | 100 psig (6.9 bar) |
| Temp. Range* | | -20...160° F (-28.9...71.1° C) |
| Effective Diaphragm Area | 1/4 in. (6.4 mm) | 7.3 in. ² (4709.7 mm ²) |
| | 1/2 in. (12.7 mm) | 11.25 in. ² (7258.1 mm ²) |
| Positioner Data | Air consumption* | 0.60 scfm balanced 0.22 scfm unbalanced |
| | Response level | The output sensitive to changes in control-air pressure as small as 0.1% of full range. |

* At 25 psig (1.7 bar)

Zero Adjustment

The point at which the valve closes can be adjusted with the zero adjusting screw located under the protective cap on top of the positioner. The closing point can be adjusted to begin at any point between 12...16 psi (0.8...1.1 bar) and will still allow full stroke of the valve with a 12 psi (0.8 bar) change in signal when using a 12 pound range spring.

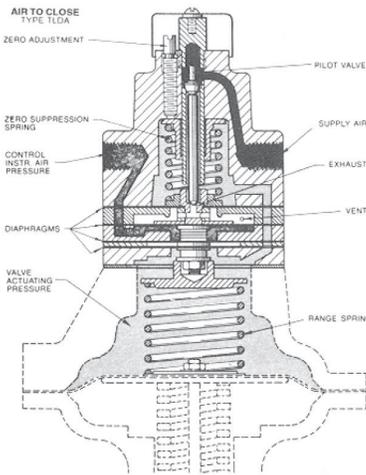

Force Spring Adjustment

The valve spring under the diaphragm plate is normally preadjusted at the factory to allow the valve to attain full travel when the instrument signal is at 15 psi (1.0 bar). Only when high packing hysteresis is encountered or when using a bellows sealed bonnet will additional forces need to be adjusted into the spring. If it becomes necessary, turning the spring adjuster (item 15) clockwise will increase the tension on the spring. If the adjuster is turned more than one complete turn, additional supply air may be required.

Supply Air Requirements

The standard supply pressure of 22 psig (1.5 bar) is sufficient to handle most applications. This amount of supply pressure required can be calculated prior to installation using the following procedure:

1. Multiply the maximum shutoff pressure by the seat orifice area.
2. Multiply the trim stem or bellows, if used, by the maximum downstream pressure.
3. Divide whichever is greater by the effective area of the actuator. This number is the amount of supply air in psi that is required over and above the *Inst.* signal.

Example: *Inst.* signal is 3...15 pounds
 Calculated additional supply is 8 psi (0.5 bar)
 8 + 15 = 23 psi

NOTE: Do not exceed 25 psi (1.7 bar) without consulting the factory.

NOTE: Do not mount upside down for outdoor use, as water can enter the spring cavity via the stem and may freeze in colder climates.

Control. Manage. Optimize.

Research Control is a registered trademark of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2015 Badger Meter, Inc. All rights reserved.

www.badgermeter.com

The Americas | Badger Meter | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400
 México | Badger Meter de las Americas, S.A. de C.V. | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882
 Europe, Middle East and Africa | Badger Meter Europa GmbH | Nürtinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0
 Europe, Middle East Branch Office | Badger Meter Europe | PO Box 341442 | Dubai Silicon Oasis, Head Quarter Building, Wing C, Office #C209 | Dubai / UAE | +971-4-371 2503
 Czech Republic | Badger Meter Czech Republic s.r.o. | Mařikova 2082/26 | 621 00 Brno, Czech Republic | +420-5-41420411
 Slovakia | Badger Meter Slovakia s.r.o. | Racianska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01
 Asia Pacific | Badger Meter | 80 Marine Parade Rd | 21-06 Parkway Parade | Singapore 449269 | +65-63464836
 China | Badger Meter | 7-1202 | 99 Hangzhong Road | Minhang District | Shanghai | China 201101 | +86-21-5763 5412